




DATA SHEET

S-FOLD-

CURTAIN STYLE

SEWING GUIDE



Cutting SW01 Tape
Your curtain tape length is based off your glider count and desired fullness as seen below. When cutting the SW01 tape, cut between the pockets 



Sew the heading tape to the top of the curtain over a 3" hem.

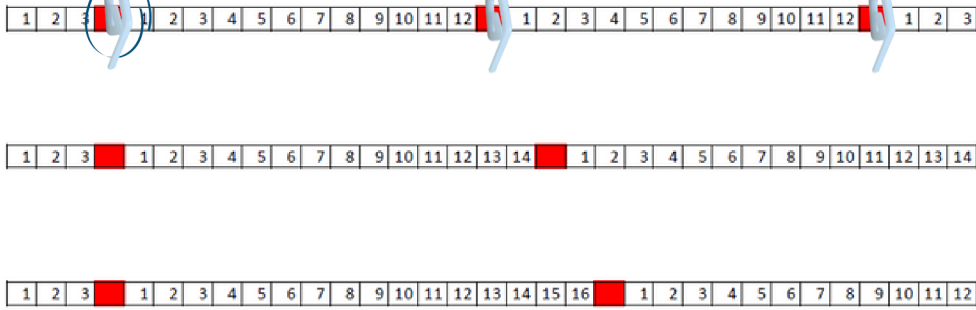
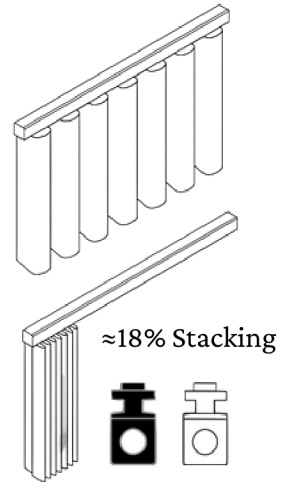
- The calculation below for pocket spacing includes 3 pockets at each end for the return.
- S-fold width can be adjusted on site.
- Use the same amount of hooks as gliders in the glider count. (Always an even Number)
- Use this guide to determine your hook spacing based on fabric fullness.

HOOK PLACEMENT

80% Fullness
1.8x
*D≈4 3/4"

100% Fullness
2x
*D≈5 1/2"

120% Fullness
2.2x
*D≈6 1/4"

S-Fold Gliders

G800 Glider  White - Black

Adjustable fullness and curtain depth

Compatible Tracks



FS16 -
CEILING MOUNTED TRACK



F16 -
RECESS MOUNTED TRACK



F120 -
SUSPENDED, WALL & CEILING MOUNTED

Contact



P | 718-412-9040
F | 718-412-9039
E | info@sampsonmills.com

#S-Fold DRAPERY STYLE

Manufactured by: Sampson Mills Ltd. - P.O. Box 1147 New York, 10150
www.sampsonmills.com