



Screw Spacing


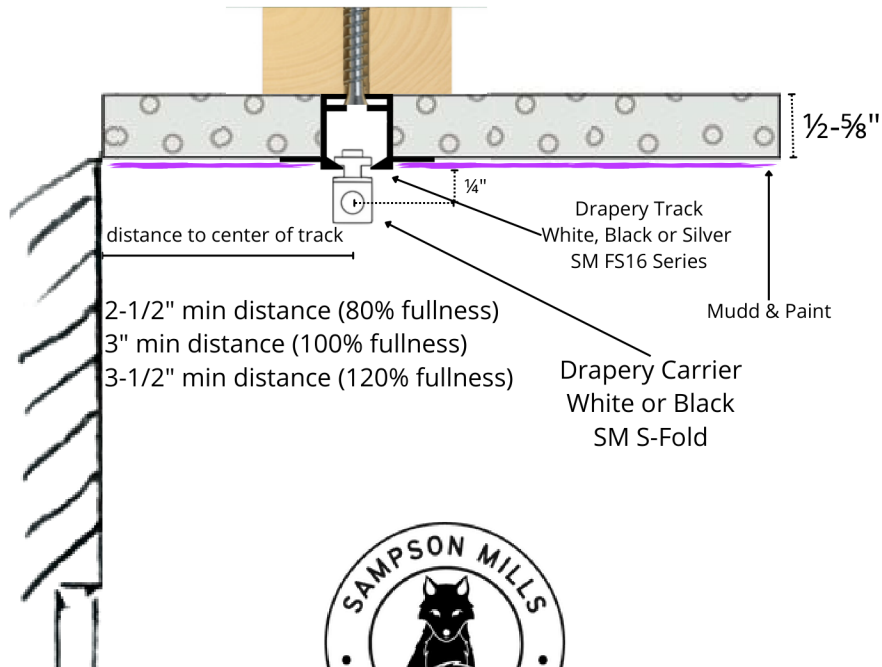


Install Video

www.SampsonMills.com

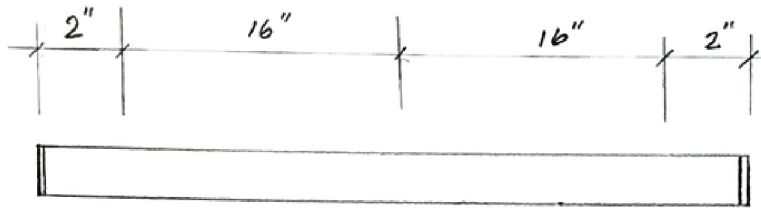

Website

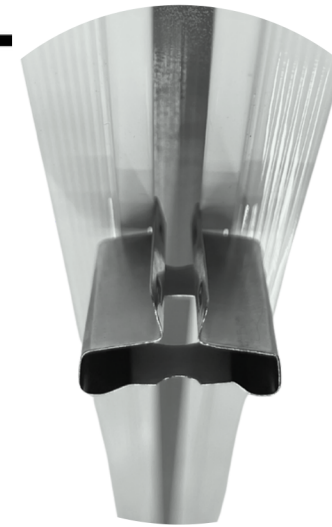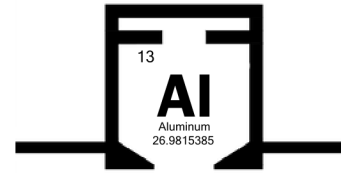

Installing F16 Tracks


! WARNING

Read instructions before installing.


**Must Use Profile Protector
Only use Sampson Mills Screws
or it will void the warranty.**

Read instructions before installing

Watch our Install Video for more details

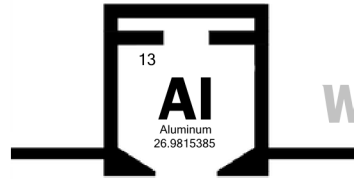


When Joining/Connecting Tracks

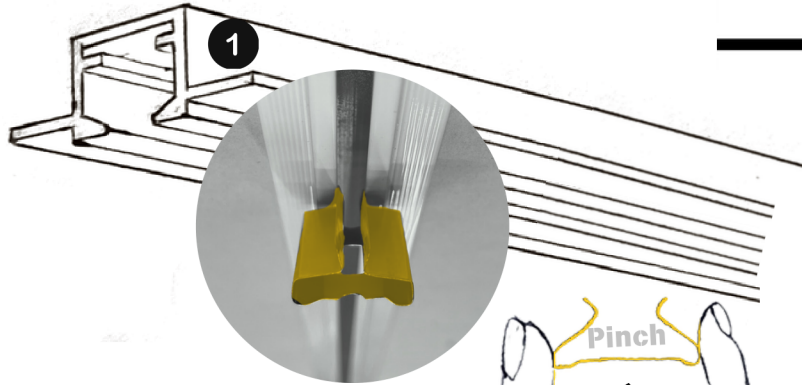


- 1 F16 Track
- 2 Profile Protector
- 3 Drill Bit
- 4 Trim Head #6 Screw
- 5 #1 Square Drive
- 6 Connecting Bridge
- 7 AK2 Allen Key
- 8 Painters tape




Test a glider after screwing to make sure gliders clear screws and to make sure you didn't screw too tight





A

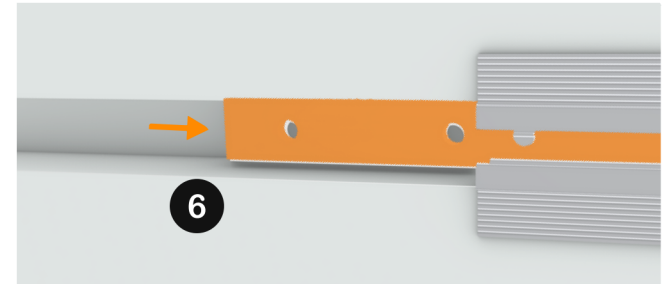

B

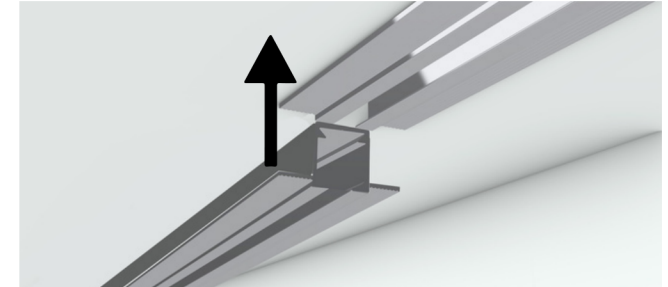

C

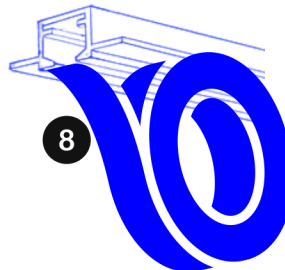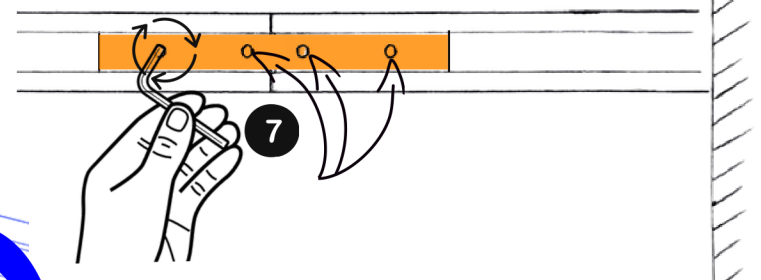

Note: Apply Painters tape before mudding & Painting see instructions here



Skipping steps will void the warranty