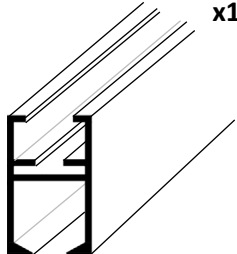
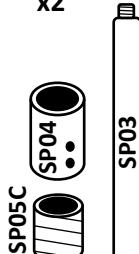


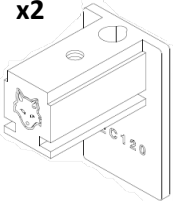
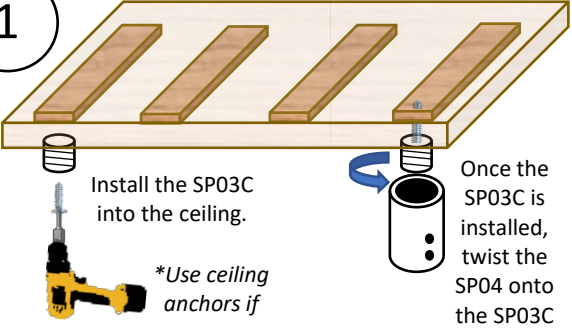
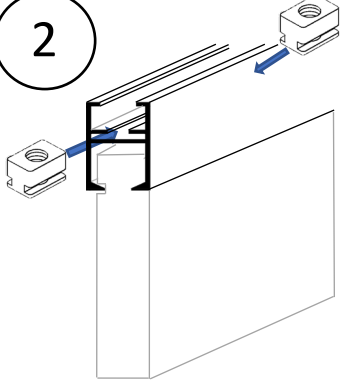
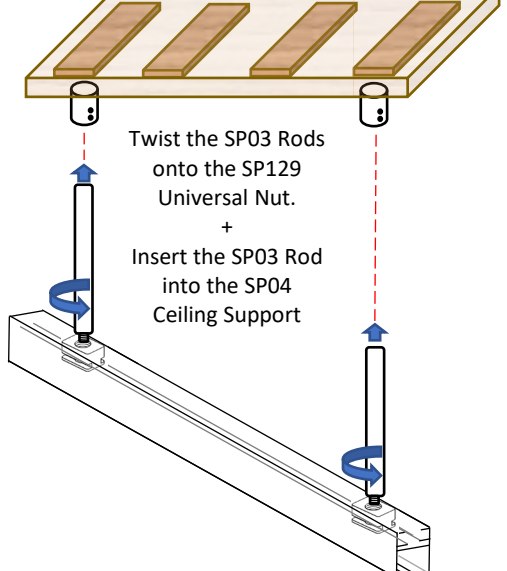
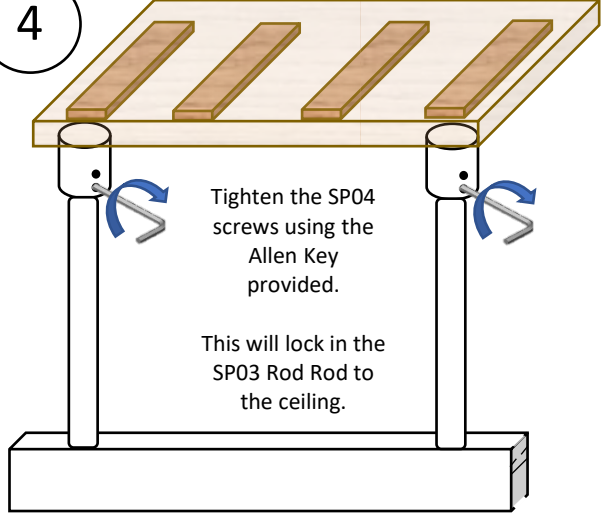
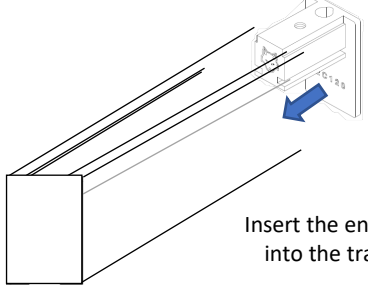
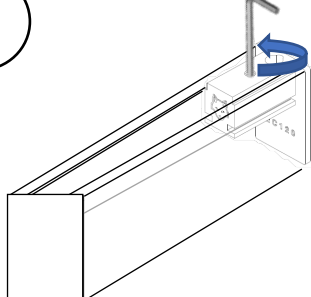


Column Installation

<p>SF90/SF120 Profile x1</p> 	<p>SPD Set x2</p> 	<p>SP129 Universal Nut x2</p> 	<p>AK2 Allen Key x1</p>  <p>Endcap x2</p> 
<p>1</p>  <p>Install the SP03C into the ceiling.</p> <p><i>*Use ceiling anchors if necessary</i></p> <p>Once the SP03C is installed, twist the SP04 onto the SP03C</p>	<p>2</p>  <p>Insert the Fabric / Felt into the profile (See videos for material install instructions)</p> <p>Insert the SP129 Universal Nut into the profile (1 per Rod)</p>		
<p>3</p>  <p>Twist the SP03 Rods onto the SP129 Universal Nut.</p> <p>+ Insert the SP03 Rod into the SP04 Ceiling Support</p>	<p>4</p>  <p>Tighten the SP04 screws using the Allen Key provided.</p> <p>This will lock in the SP03 Rod Rod to the ceiling.</p>		
<p>5</p>  <p>Insert the endcap into the track</p>	<p>6</p>  <p>Lock in the endcap on each side using the allen key provided.</p>		

For detailed installation videos visit: www.SampsonMills.com/Installation