



Shuttle Installation


PF123 Profile
x1

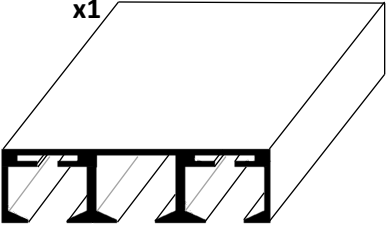


**PDB4
Phillips Head
Screwdriver Tip**
x1




**SC25-4
1" Screw**
1 per 16" + 2




Endcap
x1

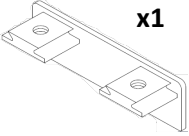


Allen Key
x1




**PP28
Profile Protector**
x1



1a

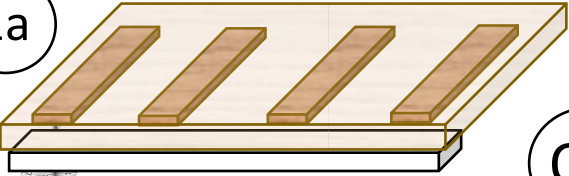


Using your 3/32" drill bit, drill through the track into the wooden joists in the ceiling (use PP28 profile protector)

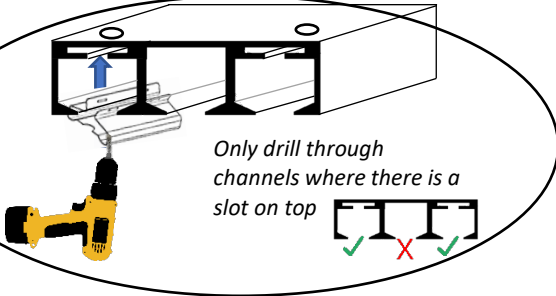

Only drill through channels where there is a slot on top

1b

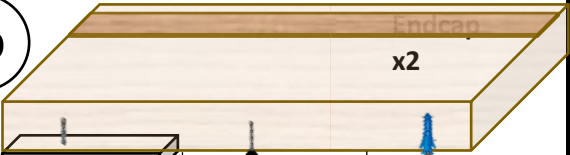


OR


Step 1:
Using your 3/32" Drill Bit, pre-drill through the track into the ceiling (use PP28 profile protector)

Step 2:
Using your drill bit for your anchor, enlarge the pre-drilled area from Step 1

Step 3:
Insert the anchor into the ceiling

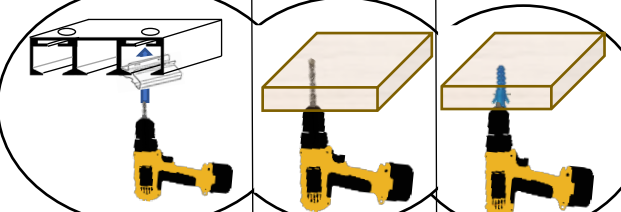


2

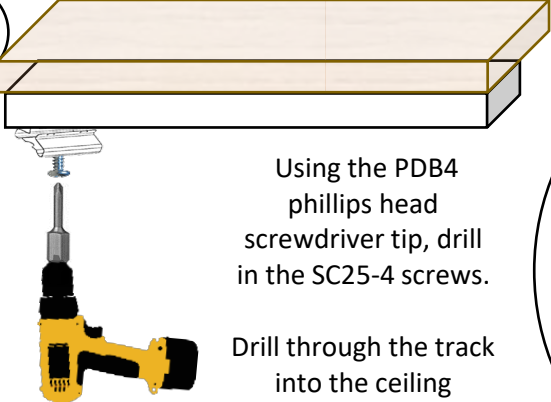

Using the PDB4 phillips head screwdriver tip, drill in the SC25-4 screws.

Drill through the track into the ceiling support (use PP28 profile protector).

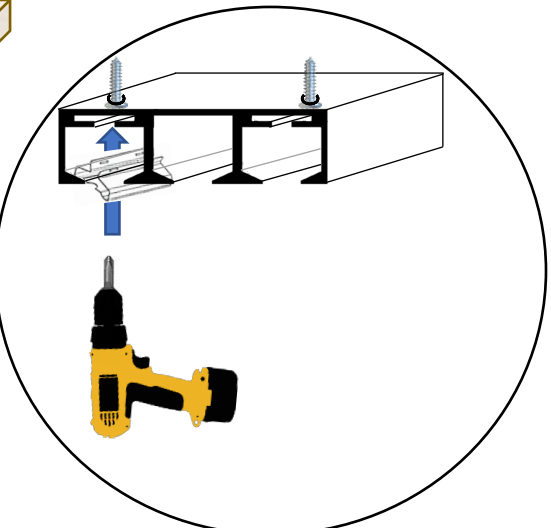

For detailed installation videos visit: www.SampsonMills.com/Installation