


Screw Spacing

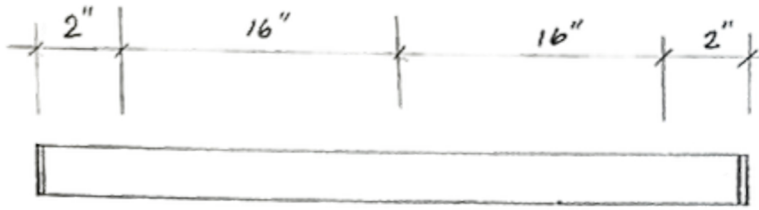

Max Distance Between Rods

24"-48"

(Based on 24" drop)

*24" when **only** using suspension rods

*36" when using **1 side wall mount** with suspension rods

*48" when using **2 side wall mounts** with suspension rods




Install Video

Website

www.SampsonMills.com

Installing F120 Tracks

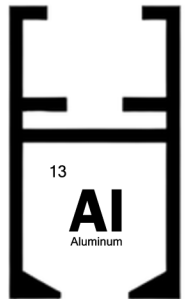


WARNING

Read instructions before installing.

- **Tension cables require a solid connection like Ceiling bracket, wall bracket, or Solid Rod unless curtain is stationary.**
- **Max Distance Between Rods 24"-48"**
- **Max Drop 39" (Contact us if larger)**

Read instructions before installing


Watch our Install Video for more details

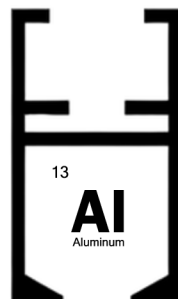

A Suspending

B Ceiling Mount

C Wall/side wall Mount

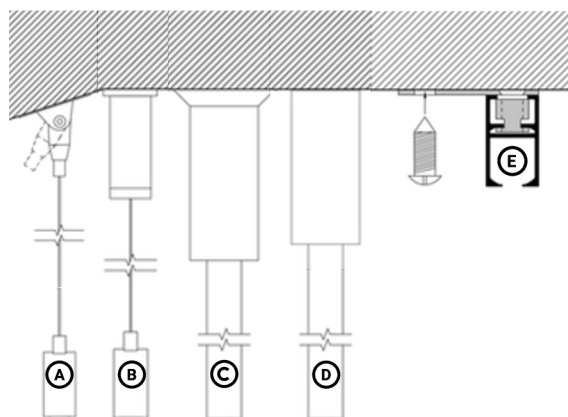

Ceiling Suspension Options

A STW78 - Angled Surface Mounted Tension

B STS78 - Surface Mounted Tension

C SPD - Surface Decorative Suspension

D SPR - Surface Mounted Suspension Rod


E SB12 - Surface Mounted Bracket

1 F120 Track

2 SP129 Note: This is the universal M6 connection for all mounting options

3 Mounting options

4 Connecting Bridge

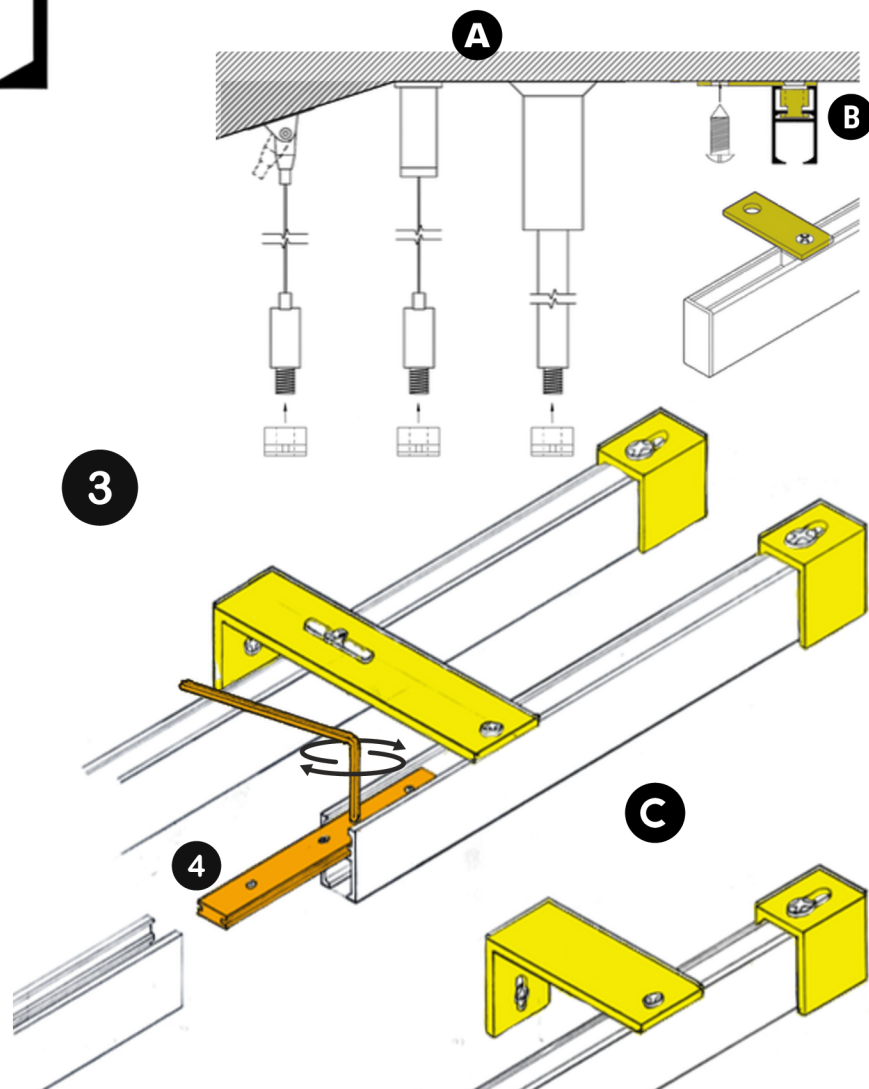

Skipping steps will void the warranty

